


AB MACHINE INSTALLATION & USER GUIDE

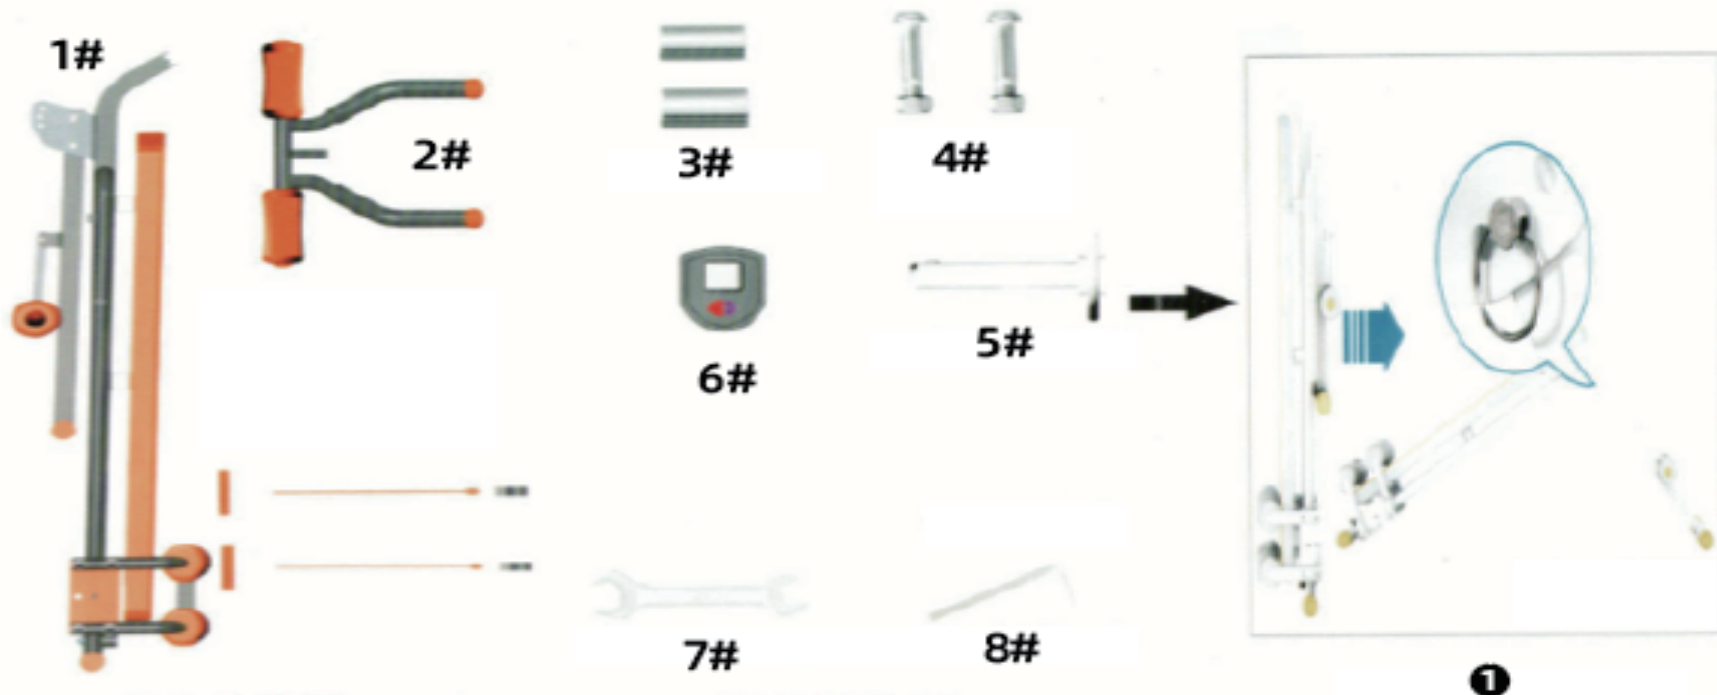

1#	Main frame	1
2#	Handle	1
3#	Sleeve 11x23	2
4#	Screw/nut M8X40MM	2
5#	PIN M8x55MM	1
6#	COUNTER	1
7#	Spanner 13	1
8#	HE	1

Please put in shade, donot expose into the sun for long time .
Wipe this machine in regular, Never use corrosive products to clean .
Donot press it with heavy weights when stock .



PARTS LIST

COMPONENTS LIST


① Assemble the angle adjusting bracket



④ Fold and stock



③ Fix the counter and connect the cable

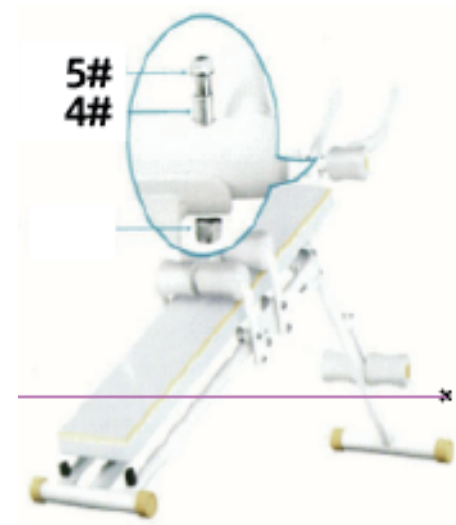

② Handle assembling