

## Double Anywhere Hammock with Frame

2 x Base feet	2 x Bolt, nut & washer set to connect Hammock support frames to base frame
4 x Plastic feet caps	2 x Bolt, nut & washer set to connect base frame to base feet
1 x Base frame	
2 x Hammock support frame	
2 x Hammock attachment hook, curved washer & wing nut set	

### ASSEMBLY INSTRUCTIONS:

#### Step 1

Choose a level site and lay out the contents of your hammock and frame. Make sure all parts are present and place them side by side for easy identification. Use Figure 1 as a position and component guide for the following steps taking particular note of the washer position in the order of assembly.

#### Step 2

Locate the four plastic feet caps and the two base feet. Slide the plastic feet caps over the ends of the base feet ensuring there are securely in position.

#### Step 3

Locate the base frame and the two base feet. Connect together ensuring the U bolts are securely fastened into position.

#### Step 4

Locate the two hammock support frames and connect these with the base frame assembly. Ensure the bolts are securely fastened into position.

#### Step 5

Position the hook into the hole towards the top of the hammock support frame. Select the correct hole appropriate to the hammock size.

#### Step 6

Position the curved washer and fasten the wing nut to the threaded bolt end of the hook.

#### Step 7

Attach the hammock to the hook as shown in Figure 2. To check the hook is positioned into the correct hole during step 4, tension the hammock so when fully loaded the hammock forms a natural curved shape with the lowest point being a minimum of 40cm above the ground. As the hammock stretches with use you will need to adjust.

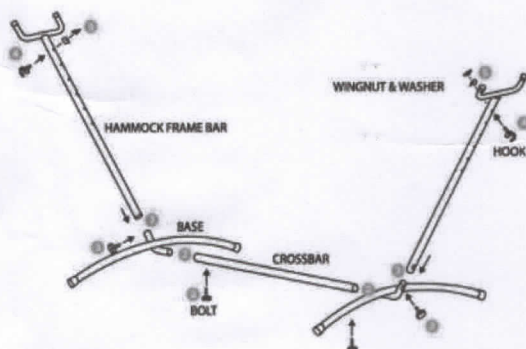


Figure 1



Figure 2

**INSTALLATION AND WARNINGS** - hammocks are portable and are not designed as a permanent structure, continued exposure to sunlight and rain will cause this hammock to deteriorate and weaken. Before each use always check the attachment points are secure and the frame assembly is structurally firm and all nuts and bolts are tight and remain tight. When entering the hammock, always sit or lie on the hammock in the middle, never stand on the hammock. Children must be accompanied by an adult at all times. Avoid wearing any shoes or clothing with sharp or protruding objects that may damage or tangle with the hammock. At no stage is it necessary to apply any excessive force to achieve any of the above steps. Excessive force will result in damage to the frame or hammock and this is not covered by warranty.

**PLEASE NOTE** - Accessories shown may be for display purposes only and not included with the product. Due to our policy of continual product development, specifications and features of this product may vary from what is stated.

### DISASSEMBLY INSTRUCTIONS

To pack away, simply reverse the above process.